


Connecting the Terminal Block


Connect main supply (brown - Live, blue - Neutral) into terminal block making sure all connections are tight.

Installation Step :

- 1 Cutting a 142x37mm hole on the ceiling .




- 2 First connect the input end of the driver with the power line, then pull up the clip of the lamp, finally put the whole lamp into the pre-opened hole.

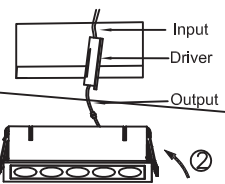


- 3 Installation complete.

Luminaires not suitable for covering with thermally insulating material



Disassemble Step :

Catch and hold the lamp and pull it out .

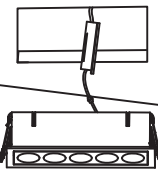

- 1

DOWNLIGHT RECESSED SPOT

S192

Please read instructions before commencing installation and retain for future reference.

SPECIFICATIONS

- **Material:** Aluminium
- **Lamp Type:** LED | 12W | 15V | 700mA | 3000K | 800Lm | CRI 90
- **Ingress Protection:** IP20 Protection against entry of solid objects greater than 12mm in diameter.

INSTALLATION INSTRUCTIONS

⚠ Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

- Ensure the main supply is switched off.
- Cutting hole L: 14.2cm W: 3.7cm on the ceiling. Depth required 5cm.
- Connect the input end of the driver with the power line, then pull up the clips and put the whole lighting fixture into the pre-open hole. Suggested On-Off Driver (KEDH012 pass from the hole). Suggested DALI Driver (4052899548190 pass from the hole).
- Reconnect power.

WARNING

⚠ Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire with thermally insulating material. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.

