



Connecting the Terminal Block


Connect main supply (brown - Live, blue - Neutral) into terminal block making sure all connections are tight.

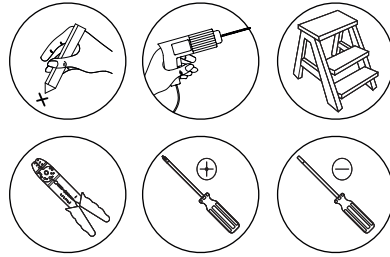


Installation Step
First : Cutting a 147x43mm hole on the ceiling . use screw to fixate the outer frame in ceiling plate

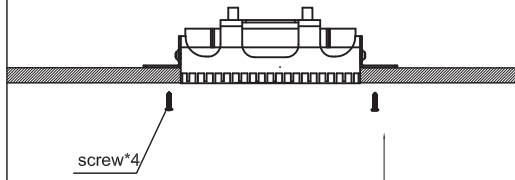


Second : Batch ash, be careful not to enter the ash hole .

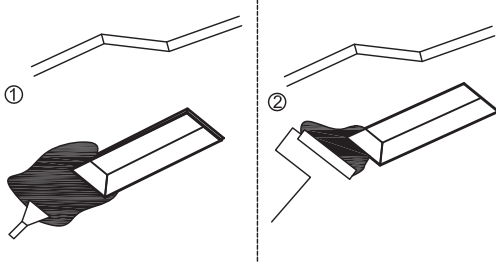


Third: Connect the Lamp with AC power and push the lamp into the ceiling.

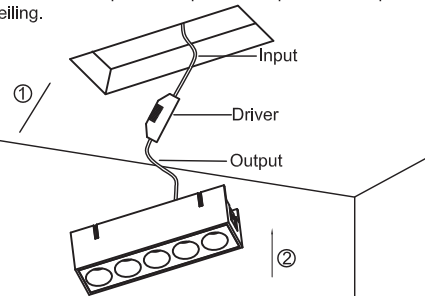

Fourth :Installation complete.

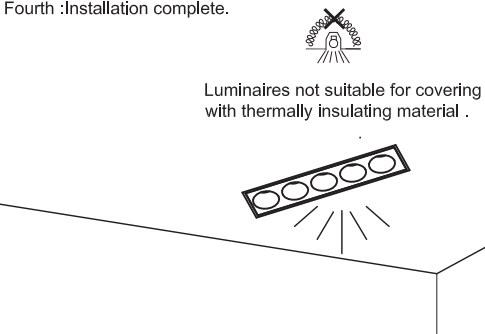

Fifth : Catch and hold the lamp and pull it out .

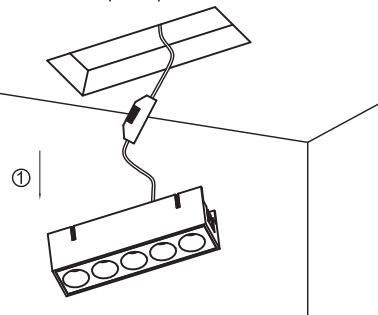

DOWNLIGHT TRIMLESS SPOT

S193

Please read instructions before commencing installation and retain for future reference.

SPECIFICATIONS

- **Material:** Aluminium
- **Lamp Type:** LED | 12W | 15V | 700mA | 3000K | 800Lm | CRI 90
- **Ingress Protection:** IP20 Protection against entry of solid objects greater than 12mm in diameter.

INSTALLATION INSTRUCTIONS

⚠ Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

- Ensure the main supply is switched off.
- Cutting hole L: 14.7cm W: 4.3cm on the ceiling, use screws to fix the outer frame in ceiling plate. Depth required 6.5cm.
- Cover by spreading the plaster coating, being careful not to cover the cutting hole you made.
- Connect the recessed downlight spot with AC power and push it into the ceiling. Suggested On-Off Driver (KEDH012 pass from the hole). Suggested DALI Driver (4052899548190 pass from the hole).
- Reconnect power.

WARNING

⚠ Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire with thermally insulating material. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.

